

## 83-643 Removal and installation of air jet nozzle



---

### Note


---

Be sure to install air hose in such a manner that no change of cross section (inside) will occur.

- 1 Remove legroom cover at the right.
- 2 Pull both air hoses from air jet nozzle (47).
- 3 Unscrew screw of holder for air jet nozzle (47).
- 4 Pull air jet nozzle (47) out of blower box.
- 5 For installation proceed vice versa.
- 6 Check automatic climate control for function.

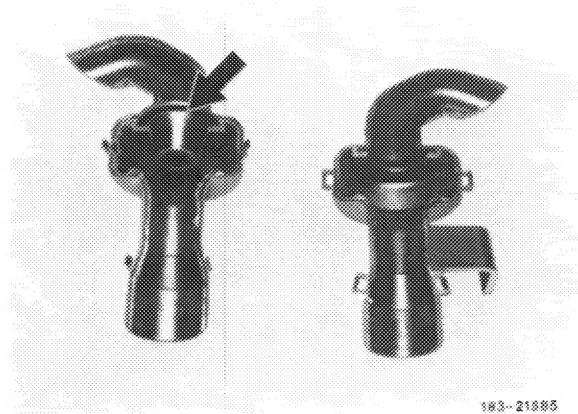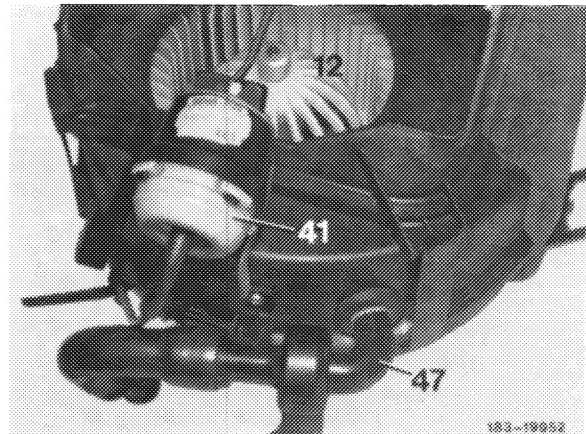

Operational (arrow)  
air jet nozzle (47)

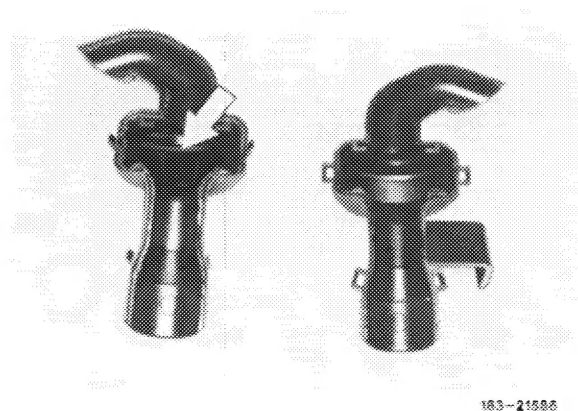

Defective air jet nozzle  
(47) (arrow), reversed  
function